


## DIMENSIONS

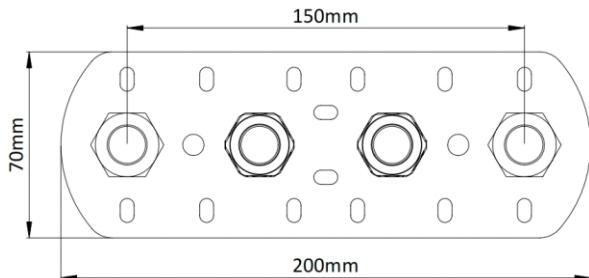

## INSTALLATION INSTRUCTIONS

1. Secure the Shower Fixing Plate to a noggin or brick/block wall.
2. Install the 15mm copper hot and cold water pipes, ensuring they extend approximately 60mm from the final wall surface.
3. Firmly tighten the clamping nuts.
4. Complete the wall finishing with plaster and/or tiles.
5. Using a pipe cutter, trim the copper pipes so that the shower mixer cover plates align with the finished wall surface.
6. Thoroughly flush the pipework.
7. Attach the shower mixer using the supplied fittings.

## KEY FEATURES

- Shower Fixing Plate designed for 15mm pipework, compatible with 15mm pipe to 1/2" BSP
- Maintains a precise 150mm center spacing
- Installed at the first fix stage, ensuring pipes remain securely positioned
- Allows for tiling without disturbing the pipework
- Suitable for all wall types, includes screws and wall plugs

## INSTALLATION INSTRUCTIONS

1. Connector
2. Compression nut
3. Nut
4. Plate

